Installation Instructions

002-0744-00 WIDE HEADREST KIT

KIT COMPONENTS

Part Number	Description	Qty.
002-0744-00	Wide Headrest Kit	
• 029-2238-00	Round Headrest	1
• 003-1357-00	Installation Instructions	1

REQUIRED TOOLS

None

INTRODUCTION

To provide a larger surface area for a patient's head during examinations / procedures.

INSTALLATION

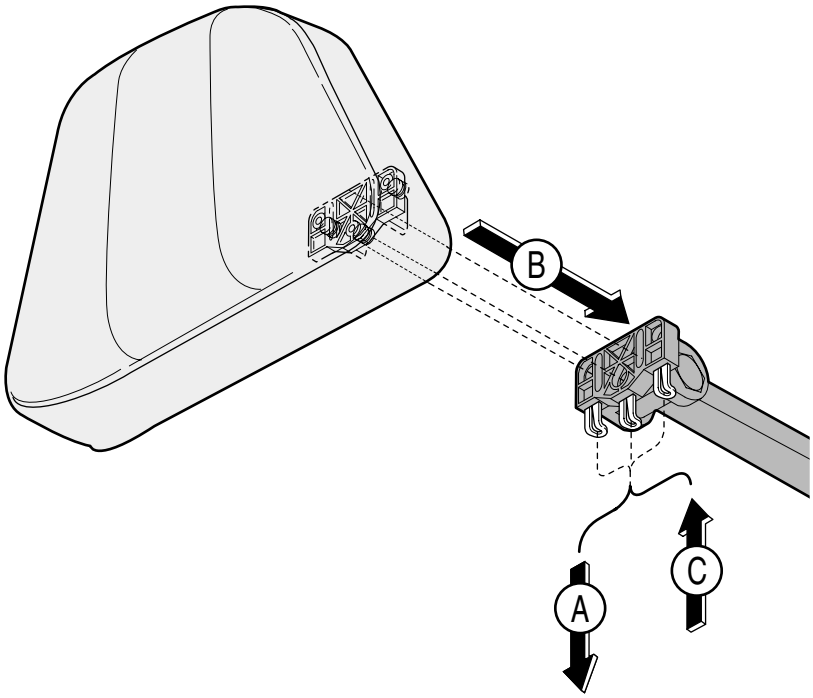

A. Pull downward on slide bars and remove existing headrest.
B. Place desired headrest on pivot mount.
C. Push upward on slide bars to lock headrest to pivot mount.

003-1357-00 Rev. A (4/03)

© Midmark Corporation - 2003